

Ages 6+



## WELCOME

Welcome to Spinballs Poi. Poi is Maori for 'ball on a string' and originated in New Zealand hundreds of years ago. Practicing poi improves flexibility, dexterity, coordination, and strength in arms and hands, while the movements and flowing hand paths give it a meditative appeal like Tai Chi.

## GLOW WITH THE FLOW

Paint the night with color and light! Spinballs features a spectrum of LED colors. Spin your poi around in rhythmical and geometric patterns to create a visual effect, and light trails. It's fun to do and fun to learn!

## APP & VIDEOS

Get Spinspired! Spinning poi is an activity you can progress with to challenge yourself. There are endless tricks to learn. Download the **Fun In Motion Toys** APP for Android & Apple devices to learn the moves and motions. With over 40 instructional videos, we'll teach you all the moves and motions to go from beginner to pro!




## #SPINBALLS

Light up the night! Share your #Spinballs light trails with @FuninMotionToys on Facebook, TikTok, Instagram & YouTube!



## WHAT'S INCLUDED

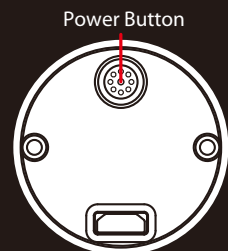

## TURNING ON/OFF

To turn on Spinballs, press the power button on the battery cover quickly (you will enter customizing process if you hold it for more than 3 seconds). To turn off, hold the power button down for 3-4 seconds and Spinballs will turn off.

## FEATURES 22 LIGHT MODES (21 PRESET/1 CUSTOMIZABLE)

Press 1. Rainbow Fade



Press 2. Solid Color - pick a color and it stays there.



Press 3. Rainbow Fade (Fast)



Press 4. Rainbow Strobe



Press 5. Rainbow Ribbon



Press 6. Flame (Red Solid + Yellow Dotted)



Press 7. White Solid



Press 8. White Strobe



Press 9. Dual Ribbon (Red + Blue)



Press 10. Dual Ribbon (Blue + Green)



Press 11. Dual Ribbon (Red + Green)



Press 12. Dual Ribbon (Red + Yellow)



Press 13. Dual Ribbon (Yellow + Green)



Press 14. Dual Ribbon (Yellow + Blue)



Press 15. Red Solid



Press 16. Green Solid



Press 17. Blue Solid



Press 18. Pink Solid



Press 19. Dual Ribbon (Blue + Purple)



Press 20. Triple Ribbon (Purple + Yellow + Green)



Press 21. Dual Ribbon (Blue + White)



Press 22. Triple Ribbon (Red + White + Blue) - Default Customized Mode. And it will be overwritten if you set the customized mode by yourself.



## CUSTOMIZING LIGHT MODE

Create color sets by combining any 3 colors on the color palette (solid red/green/blue/yellow/purple/cyan/white and dotted red/green/blue/yellow/purple/cyan/white). Follow these steps to create a color set.

1. With the light OFF, click and hold the power button for 3 seconds. Release the button and enter the customized mode.
2. You will now see RED, the first color on the color palette. Continue clicking to see all the 7 solid colors and 7 dotted colors.
3. To choose the first color(1 of 3), stop on the color you want and double click(the ball will flash twice for confirmation). Select your 2nd and 3rd color by this process. Hold for 3 seconds to quit the customized mode and turn off.

After you picked 3 colors, the customized mode will automatically start. The ball will quit the customized mode and turn off if no operation for 30 seconds.

Every time you create a new customized mode, the old customized mode will be overwritten. The customized mode will also return to default setting when you recharge.


## GETTING STARTED

Hold one Spinball in each hand, and put your finger through the 2 loops of the handle - one finger in each. Beware of your surroundings and begin to spin them around in circular motions using your wrists to get a feel for your poi.

## ADJUSTING THE CORD

The cord is adjustable from 14-28 inches:


1. Remove it from the poi ball by loosening the cord and pulling the handle through.
2. Slide the slip knot to the desired length.
  - a. At shorter lengths, you will need to secure excess cord at the base after reattaching the cord to the poi ball.
3. Reattach the poi ball by looping the cord through itself, so it wraps around the rope attached to the poi.
4. For tips on trimming your cord, visit [funinmotiontoys.com](http://funinmotiontoys.com).

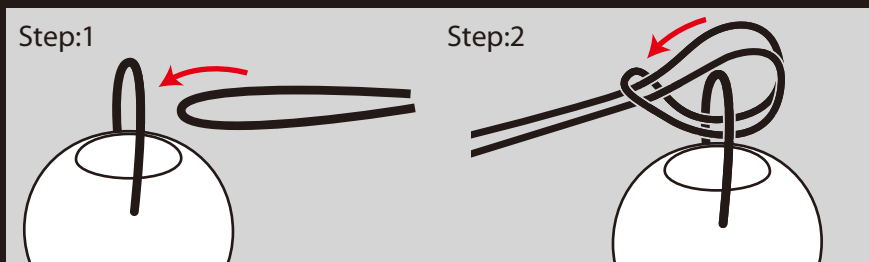

## RECHARGING THE BALL

The poi ball is rechargeable with micro USB cable included in the kit. Plug the Micro USB head into the USB port on the battery cover and connect the other end to a proper adapter (not included). Each poi ball is equipped with a rechargeable lithium battery (model number is 801520) with capacity of 200mA and voltage of 3.7V.

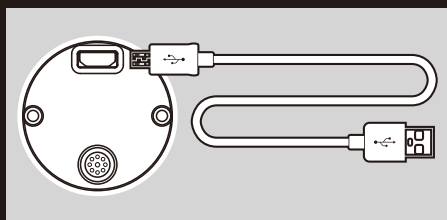


- Charge fully in as fast as 2 hours (with 2A adapter)
  1. Ball will turn RED when charging.
  2. Ball will turn GREEN when fully charged.
- Maximum battery life: 13.5 hours
- Minimum battery life: 3.2 hours (solid white mode)



## DISPOSING THE TOY


Please help the environment by disposing of your product responsibly at the end of its life. The wheeled bin symbol indicates that this product should not be disposed of in your household waste containers. Instead, the product should be disposed of by using a designated collection point for the recycling of waste electrical and electronic equipment, The Waste of Electrical and Electronic Equipment (WEEE) Directive (2002/96/EC) requires that the best available recycling techniques be employed to minimize the impact on the environment. Recycling electronics helps by keeping harmful chemicals out of the environment, and also saves money by reusing precious metals. Remove any batteries and dispose of them and the product at your local authority's recycling facility. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the location where you purchased this product.

### ⚠️ WARNING :

- For the purpose of recharging the battery, only use the detachable USB charging cable provided with this toy.
- This toy is only to be connected to equipment bearing either of the following symbols:   
- For electric toys using rechargeable batteries, the batteries should be charged under adult supervision.
- The rechargeable battery inside is NOT replaceable. Pls do NOT disassemble the ball and take out the battery.
- This toy produces flashes that may trigger epilepsy in sensitized individuals.
- Always be aware of your surroundings. Only use Spinballs where there is space free of objects and other people. Not suitable for children under 3 years of age due to entanglement risks of cords.
- Packaging and instruction must be retained since it contains important information.

## FUN IN MOTION TOYS®

Check out our award-winning products!  
Visit [funinmotiontoys.com](http://funinmotiontoys.com)

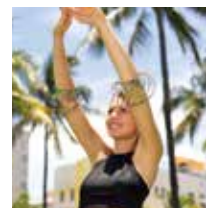

Manufactured and distributed by  
Spinballs, LLC D/B/A Fun In Motion Toys  
PO BOX 350573  
Fort Lauderdale, FL 33335, USA  
[www.funinmotiontoys.com](http://www.funinmotiontoys.com)

U.S. Pat. No. 8,926,331 B1 & 9,333,398 B1  
Designed in USA | Made in China

⚠️ **WARNING :**  
**CHOKING HAZARD**--Small parts  
Not for children under 3 years.





**WELCOME**

Welcome to Spinballs Poi. Poi is Maori for 'ball on a string' and originated in New Zealand hundreds of years ago. Practicing poi improves flexibility, dexterity, coordination, and strength in arms and hands, while the movements and flowing hand paths give it a meditative appeal like Tai Chi.

**GLOW WITH THE FLOW**

Paint the night with color and light! Spinballs features a spectrum of LED colors. Spin your poi around in rhythmical and geometric patterns to create a visual effect, and light trails. It's fun to do and fun to learn!

 
**APP & VIDEOS**

Get Spinspired! Spinning poi is an activity you can progress with to challenge yourself. There are endless tricks to learn. Download the **Fun In Motion Toys APP** for Android & Apple devices to learn the moves and motions. With over 40 instructional videos, we'll teach you all the moves and motions to go from beginner to pro!




**#SPINBALLS**

Light up the night! Share your #Spinballs light trails with @FunInMotionToys on Facebook, TikTok, Instagram & YouTube!



**WHAT'S INCLUDED**

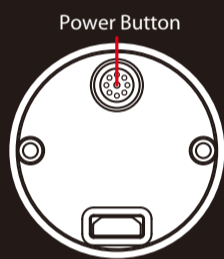 

**TURNING ON/OFF**

To turn on Spinballs, press the power button on the battery cover quickly (you will enter customizing process if you hold it for more than 3 seconds). To turn off, hold the power button down for 3-4 seconds and Spinballs will turn off.

**FEATURES 22 LIGHT MODES (21 PRESET/1 CUSTOMIZABLE)**

- Press 1. Rainbow Fade
- Press 2. Solid Color - pick a color and it stays there.
- Press 3. Rainbow Fade (Fast)
- Press 4. Rainbow Strobe
- Press 5. Rainbow Ribbon
- Press 6. Flame (Red Solid + Yellow Dotted)
- Press 7. White Solid
- Press 8. White Strobe
- Press 9. Dual Ribbon (Red + Blue)
- Press 10. Dual Ribbon (Blue + Green)
- Press 11. Dual Ribbon (Red + Green)
- Press 12. Dual Ribbon (Red + Yellow)
- Press 13. Dual Ribbon (Yellow + Green)
- Press 14. Dual Ribbon (Yellow + Blue)
- Press 15. Red Solid
- Press 16. Green Solid
- Press 17. Blue Solid
- Press 18. Pink Solid
- Press 19. Dual Ribbon (Blue + Purple)
- Press 20. Triple Ribbon (Purple + Yellow + Green)
- Press 21. Dual Ribbon (Blue + White)
- Press 22. Triple Ribbon (Red + White + Blue) - Default Customized Mode. And it will be overwritten if you set the customized mode by yourself.

**CUSTOMIZING LIGHT MODE**

Create color sets by combining any 3 colors on the color palette (solid red/green/blue/yellow/purple/cyan/white and dotted red/green/blue/yellow/purple/cyan/white). Follow these steps to create a color set.

- With the light OFF, click and hold the power button for 3 seconds. Release the button and enter the customized mode.
- You will now see RED, the first color on the color palette. Continue clicking to see all the 7 solid colors and 7 dotted colors.
- To choose the first color(1 of 3), stop on the color you want and double click(the ball will flash twice for confirmation). Select your 2nd and 3rd color by this process. Hold for 3 seconds to quit the customized mode and turn off.

After you picked 3 colors, the customized mode will automatically start. The ball will quit the customized mode and turn off if no operation for 30 seconds.

 
Every time you create a new customized mode, the old customized mode will be overwritten. The customized mode will also return to default setting when you recharge.

**GETTING STARTED**

Hold one Spinball in each hand, and put your finger through the 2 loops of the handle - one finger in each. Beware of your surroundings and begin to spin them around in circular motions using your wrists to get a feel for your poi.

**ADJUSTING THE CORD**


- The cord is adjustable from 14-28 inches:
- Remove it from the poi ball by loosening the cord and pulling the handle through.
  - Slide the slip knot to the desired length.
    - At shorter lengths, you will need to secure excess cord at the base after reattaching the cord to the poi ball.
  - Reattach the poi ball by looping the cord through itself, so it wraps around the rope attached to the poi.
  - For tips on trimming your cord, visit funinmotiontoys.com.

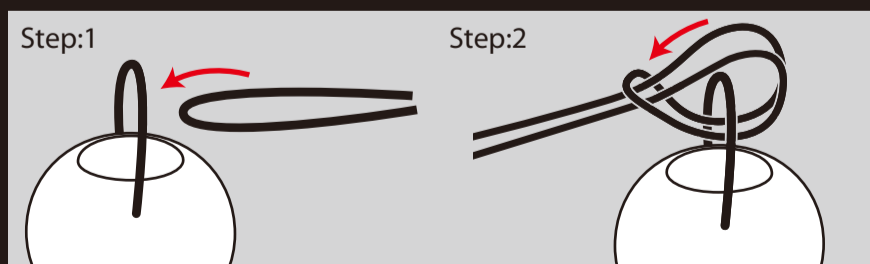

**RECHARGING THE BALL**

The poi ball is rechargeable with micro USB cable included in the kit. Plug the Micro USB head into the USB port on the battery cover and connect the other end to a proper adapter (not included). Each poi ball is equipped with a rechargeable lithium battery (model number is 801520) with capacity of 200mA and voltage of 3.7V.

 - Charge fully in as fast as 2 hours (with 2A adapter)
- 1. Ball will turn RED when charging.
- 2. Ball will turn GREEN when fully charged.
- Maximum battery life: 13.5 hours
- Minimum battery life: 3.2 hours (solid white mode)

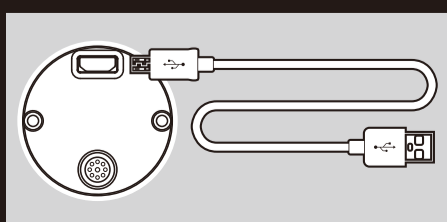

**DISPOSING THE TOY**

Please help the environment by disposing of your product responsibly at the end of its life. The wheeled bin symbol indicates that this product should not be disposed of in your household waste containers. Instead, the product should be disposed of by using a designated collection point for the recycling of waste electrical and electronic equipment, The Waste of Electrical and Electronic Equipment (WEEE) Directive (2002/96/EC) requires that the best available recycling techniques be employed to minimize the impact on the environment. Recycling electronics helps by keeping harmful chemicals out of the environment, and also saves money by reusing precious metals. Remove any batteries and dispose of them and the product at your local authority's recycling facility. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the location where you purchased this product.

**WARNING :**

- For the purpose of recharging the battery, only use the detachable USB charging cable provided with this toy.
- This toy is only to be connected to equipment bearing either of the following symbols:
- For electric toys using rechargeable batteries, the batteries should be charged under adult supervision.
- The rechargeable battery inside is NOT replaceable. Pls do NOT disassemble the ball and take out the battery.
- This toy produces flashes that may trigger epilepsy in sensitized individuals.
- Always be aware of your surroundings. Only use Spinballs where there is space free of objects and other people. Not suitable for children under 3 years of age due to entanglement risks of cords.
- Packaging and instruction must be retained since it contains important information.

**FUN IN MOTION TOYS®**

Check out our award-winning products! Visit funinmotiontoys.com



Manufactured and distributed by Spinballs, LLC D/B/A Fun In Motion Toys  
PO BOX 350573  
Fort Lauderdale, FL 33335, USA  
www.funinmotiontoys.com

**WARNING :**  
**CHOKING HAZARD -- Small parts**  
Not for children under 3 years.

U.S. Pat. No. 8,926,331 B1 & 9,333,398 B1  
Designed in USA | Made in China

